


If disassemble on the sleeve set is required, please hold the piece slowly pushing and turning simultaneously.

如有需拆卸單向鋼套結構時，請保持同心裝入單向鋼套時需邊帶動旋轉，緩慢旋入單向軸承。

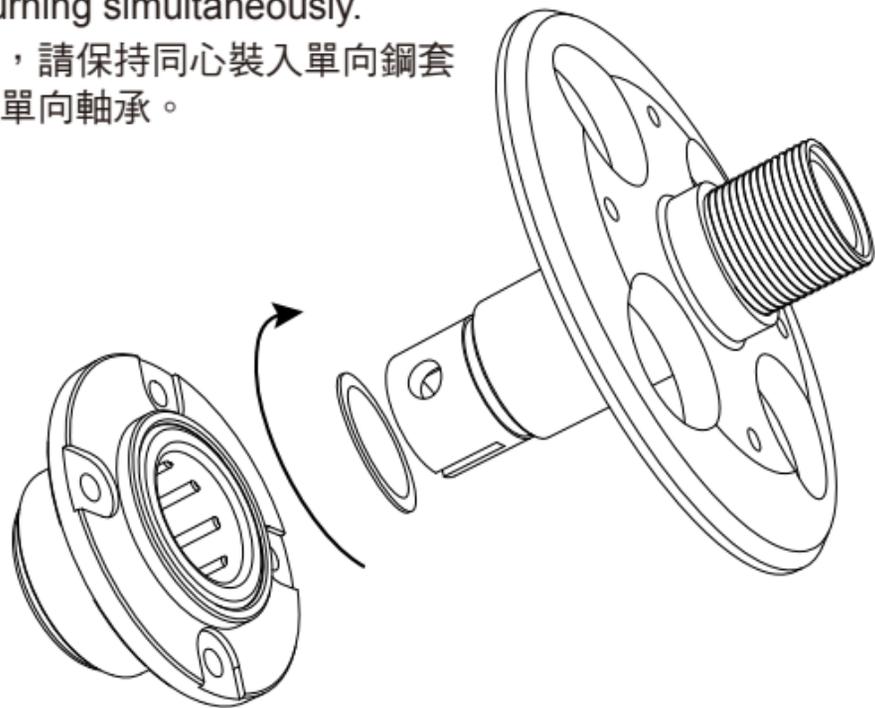

Important : The one way sleeve set pushing and turning inside the one way bearing, by which will prevent improper mounting angle from occurring.

重點:單向鋼套旋轉進入單向軸承，兼具導正作用可避免角度產生。