


將主軸組至機身並置入齒盤內，鎖緊③④再將主齒盤上推並將主軸輪檔貼合上主軸板注意主軸上下不要有間隙再鎖入①螺絲。

Install the Mast and Main Gear Set, tighten the nut ③ and bolt ④, tighten the mast collar at proper position by set screws ① to make sure the Mast is not able to be moved up or down after it is assembled.



螺絲均需上止滑劑

All Screws on side plates should be applied with thread locker.

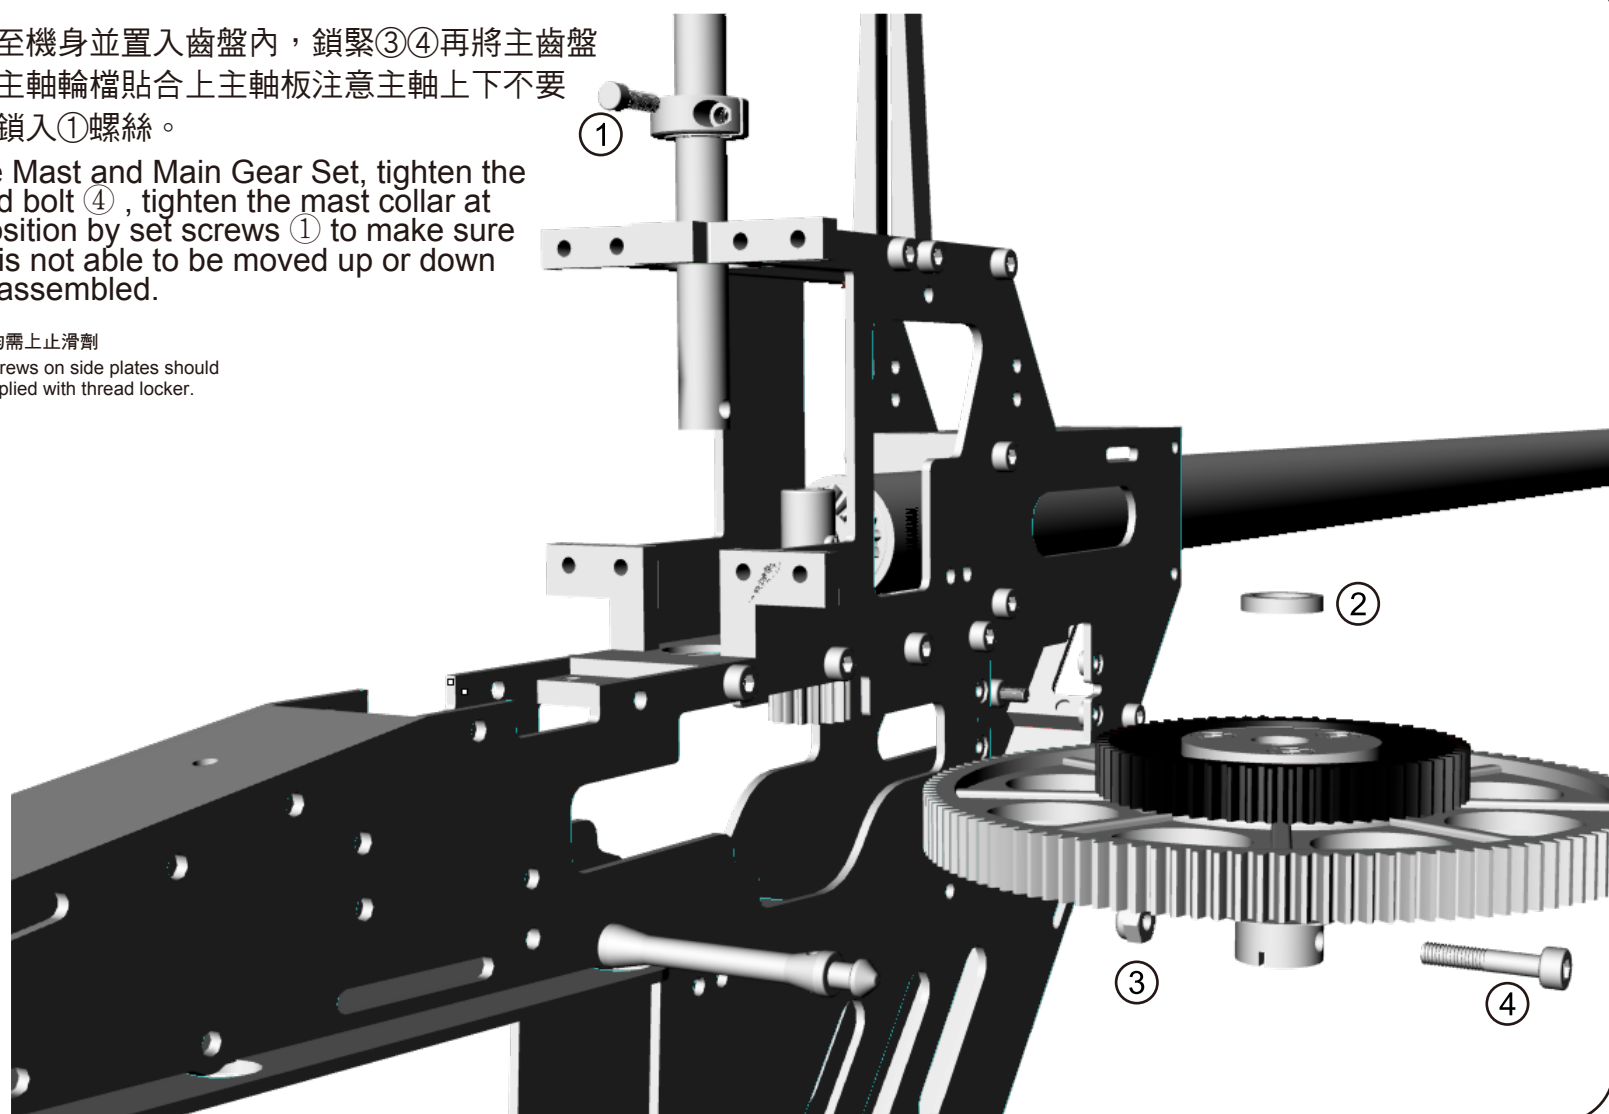

主軸上下不可有間隙

Make sure the Mast is not able to be moved up or down after it is assembled

