
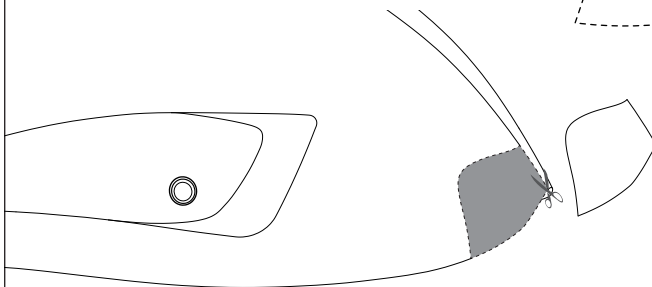


1. Apply the double-side tape on the cutting paper, cut it off
 2. Apply the cut paper on the rear side of canopy, cut the canopy along with the paper shape
- *Using the model cutter is recommended.

1. 在刀模紙背面貼上雙面膠並沿外型剪下。
 2. 將剪下的刀模紙貼到艙罩下圖位置並沿外型剪下。
- *建議使用小型剪刀或模型用剪刀處理。

Cutting paper 刀模紙

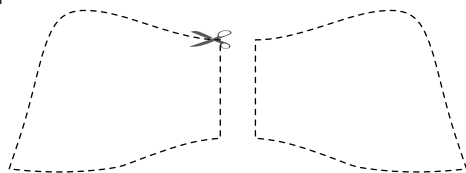

3. Insert the tail boom and fix by screws
4. Set the sponge between the aluminum tail boom & carbon tail boom, then install the tail gear assembly
3. 套入碳纖維尾管並鎖上兩側的對應螺絲。
4. 將海綿塞入尾管與碳纖維尾殼縫隙內並鎖上尾殼組。

