


1. Apply the double-side tape on the cutting paper, cut it off
2. Apply the cut paper on the rear side of canopy, cut the canopy along with the paper shape

\*Using the model cutter is recommended.


1. 在刀模紙背面貼上雙面膠並沿外型剪下。
2. 將剪下的刀模紙貼到艙罩下圖位置並沿外型剪下。

\*建議使用小型剪刀或模型用剪刀處理。

Cutting paper 刀模紙

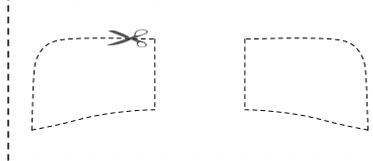

Cutting paper 刀模紙

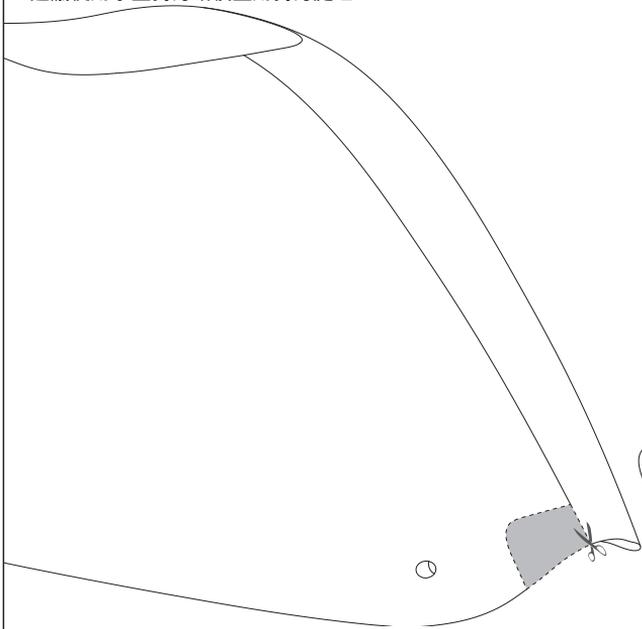

5. Insert the tail boom and fix by screws
5. 套入碳纖尾管並鎖上兩側的對應螺絲。

Apply glue on socket screws about 7mm in length.  
上膠固定止付螺絲伸出長度約7mm

