



1 1 2 3

! M3x6 = a


螺絲均需上止滑劑
All Screws on side plates should be applied with thread locker.

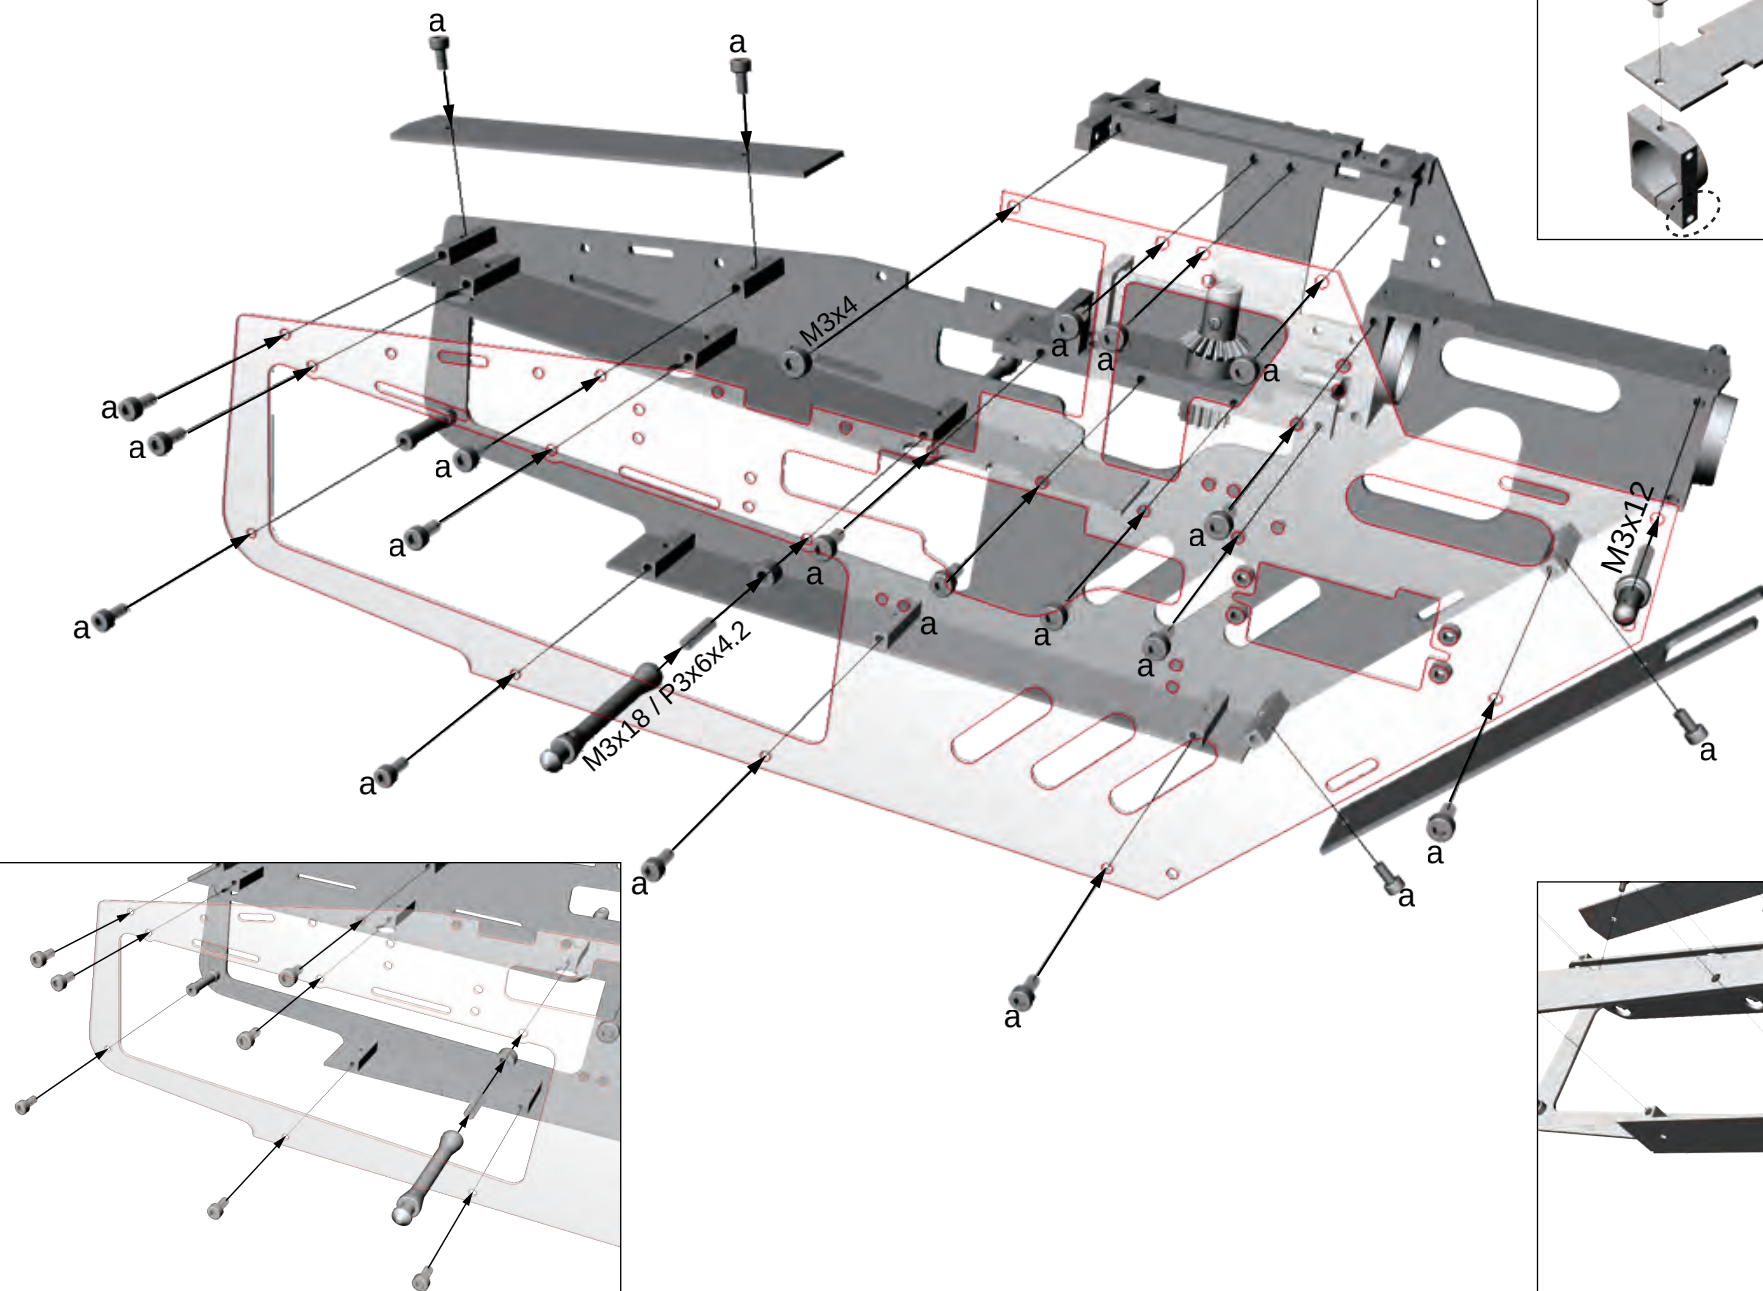

When assembling the tail boom clamp, the holes should be facing the same direction.
組裝尾管夾座時，請將貫穿孔處朝同方向組裝。

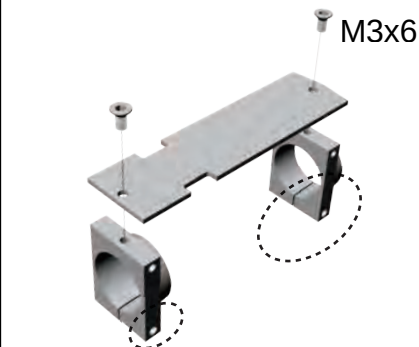

2 4

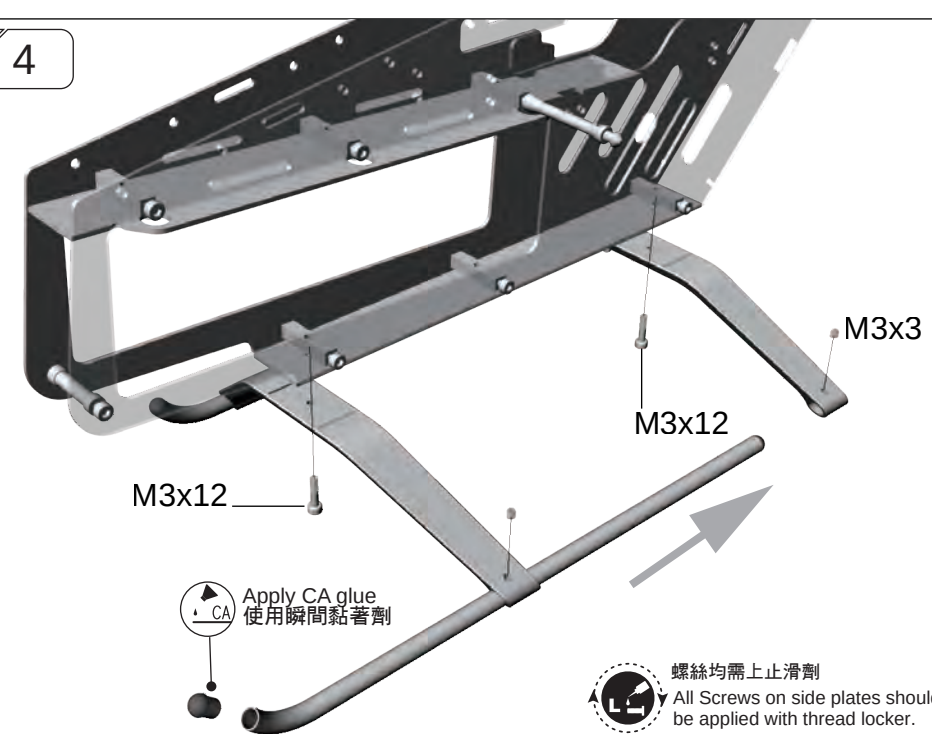

3 5

